





PR00888 - User manual revision



This coffee machine has a new software **OTPGem-114** Here you can find the main features of this profile.

## FACTORY SET-UP

Boiler temperature	95° C
Steam temperature	135° C
Pre-infusion	ON
Default temperature scale	Celsius

### **Reserve mode**

The reserve mode is in action if the water ends during the shot.

This mode allows to complete the extraction, avoiding the waste of espressos.

The LCC display shows a tap icon next to the icon of the brewing time.



Coffee comes out for few seconds.

When the supply ends, on the LCC display appears the icon meaning «lack of water».

## New dispensing time view

The countdown on the LCC display has been changed: the display shows now a chronometer.

#### Steam temperature

We have improved the passage from the coffee mode to the steam mode.

Now the transaction is faster than before.



## Partial & total doses counter

The partial doses counter can be reset from the technical menu.





# C€ EÆ[

PR00888

©2022 Gemme Italian Producers Srl. All Rights Reserved

The information and pictures provided may be changed without notice to improve the machine performance