 
 


1 Turn On

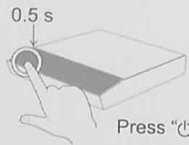

 
Press "⏻" to turn on the scale

2 Turn Off

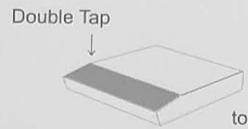

to turn off the scale


3 Tare Weight



Press "T" to tare zero the weight

4 Swith mode

 Press and hold for 2 seconds




Timer display Weight display




Timer mode

 
1: Press ⏻ button to start the timer

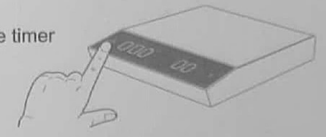

 2: Press ⏻ again to pause the timer
Press ⏻ the third time to recover timing from pausing
The longest time can be timed is 9 min 59s

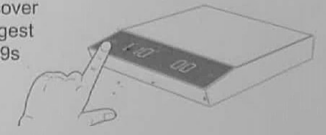

 3: Press and hold ⏻ button for 3s for tare(zero) and reset the timer

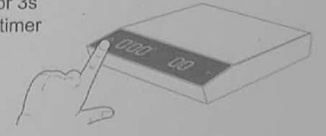

For complete user manual , please visit: www.felicitacoffee.com

FELICITA

1-Year Limited Warranty

About warranty issues : Please contact your original place of purchase or your local distributor. Products that are purchased in every country have a one year warranty for parts only. If your product fails within one year date of purchase, simply email us at support@felicity.com Please have the following information prior to contacting Felicity : **SN:FS2020800671**

- 1) Proof of date of purchase.
- 2) Model and serial number (located on bottom of the product) Felicity will contact you to determine the problem, and see if it can be fixed quickly and easily.

The customer is responsible for paying the freight charges and any duties for replacement parts that Felicity may send. Customer is also responsible to provide any labor required to repair the product.

The high quality workmanship of Felicity products bearing the Felicity trademark is guaranteed by: FELICITA CO., LIMITED



Available on the App Store



Get it on Google play

App Free Download

Calibration for felicity Scale

1. Purpose

The calibration procedure is designed for users to calibrate the felicity scale periodically in order to maintain the best weighing accuracy.

2. Why Is Calibration Important ?

 
The weighing sensor dose not only respond to weight, but also temperature effects , surface tilt, gravitational influence, voltage bias,etc. In order to rule out confounding factors and maintain the highest weighing accuracy of the scale, periodic calibration is required.

3. Recommendation


For the felicity scale, it is recommended to calibrate periodically - once per week or every other week. If the felicity scale is moved between two cities, between two environments with different temperatures, or onto a different surface, then the calibration procedure should be performed.

Simple Calibration Steps

1 Turn on the felicity scale

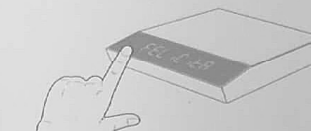

 2 Make sure the scale is in weighing mode and the unit is set to "gram", then tap the "T" button rapidly and over 6 times

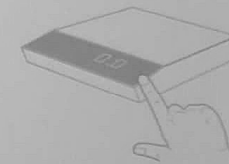

3 Keep tapping the "T" button until "C-2Er0" is shown on the display



4 Place a 100g weight on scale and wait until the display shows "PASS" Calibration is now complete

